MET Series Cold Weather Option – Supplemental Installation Instructions IMPORTANT SAFEGUARDS

- Do not mount near gas or electric heaters.
- Equipment should be mounted in locations and at heights where it will not be readily subject to tampering by unauthorized personnel.
- The use of accessory equipment not recommended by the manufacturer may cause an unsafe condition.
- CAUTION: Halogen cycle lamps are used in this equipment. To avoid shattering DO NOT operate lamp in excess of rated voltage, protect lamp against abrasion and scratches and against liquids when lamp is operating, dispose of lamp with care.
- Halogen cycle lamps operate at high temperatures. DO NOT store or place flammable materials near lamp.
- Do not use this equipment for other than intended use.
- Servicing of this equipment should be performed by qualified personnel.

SAVE THESE INSTRUCTIONS

Applications

Metrex Egress MET Series surface mount unit equipment for high abuse environments. See fixture label for restrictions.

THIS PRODUCT MUST BE INSTALLED IN ACCORDANCE WITH THE APPLICABLE INSTALLATION CODE BY A PERSON FAMILIAR WITH THE CONSTRUCTION AND OPERATION OF THE PRODUCT AND THE HAZARDS INVOLVED. FOLLOW ANY SPECIFIC INSTRUCTIONS ON LUMINAIRE LABELS.

120VAC Installation (Figure 1)


- Connect the white wires from the battery heater to common.
- Connect one red wire from the thermostat to the black wire from the battery heater.
- Connect the second red wire from the thermostat to 120VAC supply.


277VAC Installation (Figure 2)


- Connect one white wire from the battery heater to common.
- Cap off the black wire from the battery heater.
- Connect one red wire from the thermostat to the second white wire from the battery heater.
- Connect the second red wire from the thermostat to 277VAC supply.

277VAC Installation (Figure 2)

- To remove battery, remove (2) screws securing battery retainer bracket.
 Remove bracket.
- Unwrap the foil lined fiberglass insulations from the battery. There is no need to remove the insulations.
- Installation is the reverse of removal.

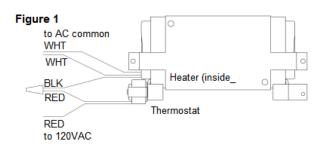

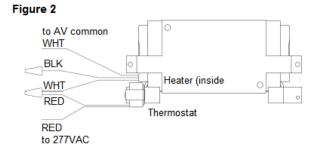

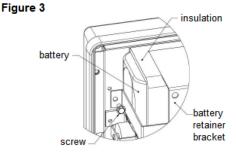

CUSTOMER SERVICE

For technical assistance, call 1-800-4KENALL (1-800-453-6255).

WARRANTY

Kenall reserves the right to issue credit, repair, or replace the defective merchandise, at its discretion, upon notification and confirmation by its local representative of the defect. Kenall also reserves the right to test and examine the defective product if the defect is questionable and to deny the warranty herein for any product altered, improperly installed, installed in applications for which it is not intended. This includes operation in ambient temperatures above stated limits for any length of time. Failure by electrical surge shall not be covered under warranty.

Kenall assumes no responsibility for labor or freight costs incurred in connection with the installation, removal, or replacement of products determined to be defective or any other consequential or incidental damages arising from the use of the product. Kenall's entire liability on any claim of loss or damage resulting from a defective product is limited to the replacement price of the product.



