



IMPORTANT SAFEGUARDS

When using electrical equipment, basic safety precautions should always be followed, including the following:

THIS PRODUCT MUST BE INSTALLED IN ACCORDANCE WITH THE APPLICABLE INSTALLATION CODE BY A PERSON FAMILIAR WITH THE CONSTRUCTION AND OPERATION OF THE PRODUCT AND THE HAZARDS INVOLVED. DISCONNECT POWER TO ALL CIRCUITS BEFORE WIRING FIXTURE. INSTALL IN ACCORDANCE WITH ALL NATIONAL, STATE, AND LOCAL CODES. DO NOT CONNECT TO AN UNGROUNDED SUPPLY. READ ALL FIXTURE MARKINGS AND LABELS TO ENSURE CORRECT INSTALLATION OF FIXTURE. SUPPLEMENTAL INSTRUCTIONS MAY BE LOCATED ON THE FIXTURE, IN ADDITION TO THIS INSTRUCTION SHEET, REGARDING ORIENTATION, OR MOUNTING RESTRICTIONS.

INSTALLATION INSTRUCTIONS


- For minimum 5/8" trade size dry wall, adjustable up to 1-1/4" (MSL/MSLD). Dry wall range 1/2" to 7/8" for MSLT. Thru-Wall, TW is fixed at 5/8" dry wall.
- Disconnect power to main circuits before wiring fixture.
- Connect fixture leads to power supply leads using connector suitable for the gage and number of wires being used (not included). Black or blue colored wire connects to the supply conductor, white fixture lead connects to the neutral supply conductor, and the grounding wire must be connected to a suitable ground. Same applies to the outlet (MSLD only).
- Carefully fasten electrical gear to fixture housing with hardware provided. Ensure all wires are inside the wire-way area.
- Fasten faceplate to fixture with included fasteners. MSLT or Thru-Wall (TW) will have two faceplates. Electrical gear is accessible from one side only.

SAVE THESE INSTRUCTIONS

Applicable to Accessory option RB, retrofit mounting bracket only MSL/MSLD Series, See Figure 1 (B-21974)

- Remove two existing mounting brackets from (rough-in) fixture housing if supplied.
- Attach two new retrofit brackets (A) with existing fasteners to holes.
- Insert (rough-in) fixture housing into the wall opening with the brackets resting on the outer wall surface.
- Slide clip (B) into the T- slot as shown in Figure 1.
- Turn fastener (C) on the clip to secure fixture housing.
- Break off Tab and discard.
- Refer to above for wiring instructions.



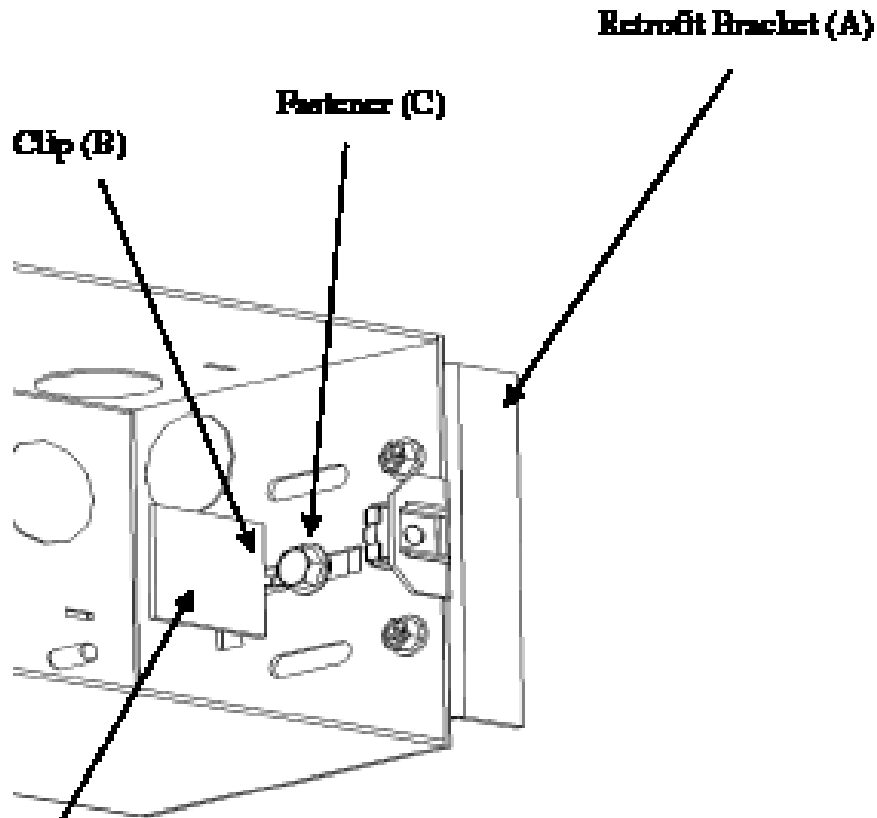

**Break off tab after fastener is secured.
Figure 1 Applicable to Accessory option RB, retrofit mounting bracket only (MSL/MSLD Series)**

CUSTOMER SERVICE

For technical assistance, call 1-800-4KENALL (1-800-453-6255).

WARRANTY

For warranty information visit www.kenall.com/Resources/Certified-Performance-Warranties



www.kenall.com

P: 800-4-Kenall

F: 262-891-9701

10200 55th Street Kenosha, Wisconsin 53144

When you see this image, you will know the Kenall product shown or described is designed and manufactured in the USA with components purchased from US suppliers, and meets the Buy American requirements under the ARRA. Kenall has not determined the origin of its domestically purchased components or the subcomponents thereof. May be covered by patents found at www.kenall.com/patents. Content of specification sheets is subject to change; please consult www.kenall.com for current product details. © 2015 Kenall Mfg. Co. All rights reserved.

F-2051_010219