

## IMPORTANT SAFEGUARDS

When using electrical equipment, basic safety precautions should always be followed, including the following:

THIS PRODUCT MUST BE INSTALLED IN ACCORDANCE WITH THE APPLICABLE INSTALLATION CODE BY A PERSON FAMILIAR WITH THE CONSTRUCTION AND OPERATION OF THE PRODUCT AND THE HAZARDS INVOLVED. DISCONNECT POWER TO ALL CIRCUITS BEFORE WIRING FIXTURE. INSTALL IN ACCORDANCE WITH ALL NATIONAL, STATE, AND LOCAL CODES. DO NOT CONNECT TO AN UNGROUNDED SUPPLY. READ ALL FIXTURE MARKINGS AND LABELS TO ENSURE CORRECT INSTALLATION OF FIXTURE. SUPPLEMENTAL INSTRUCTIONS MAY BE LOCATED ON THE FIXTURE, IN ADDITION TO THIS INSTRUCTION SHEET, REGARDING ORIENTATION, OR MOUNTING RESTRICTIONS.

## SAVE THESE INSTRUCTIONS

### Standard Luminaire - Back Feed

1. Remove refractor from base plate.
2. Straighten tabs on base plate and remove wireway assembly.
3. For Peace of Mind Guarantee®, fixture must be mounted to building with at least 4 fasteners (4 point mounting). Attachment to the electrical box only will not insure proper fixture performance.
4. Disconnect power to the circuit before wiring fixture.
5. Place fixture over an installed electrical junction box . Locate and drill 4 pilot holes in mounting surface. Use fixture base as template. Using 1/4-20 fasteners and anchors appropriate for the mounting surface, (not supplied), mount fixture base to building. NOTE: To seal against moisture, insure gasket is in place, free of tears, maintaining original form.
6. Attach wireway assembly by snapping loose end of nylon beaded wire ties into keyholes in wireway. Connect fixture leads to power supply leads using connectors suitable for the gauge and number of wires being used (not included). Connections are to be made in the junction box, not the fixture. Black fixture lead connects to the supply conductor, white fixture lead connects to the neutral supply conductor, and the grounding wire must be connected to a suitable ground.
7. Reinstall wireway assembly and twist tabs at ends of base plate.
8. Install lamp(s) (supplied separately or by others).
9. Reinstall refractor using all Torx® screws provided.

NOTE: Check gasket for proper seal between diffuser and mounting surface.

### Surface Conduit Feed

1. Follow steps 1 through 5 above.
2. Remove knockout(s) from end(s) of base plate.
3. Connect conduit to base plate.
4. Install conduit gasket(s) supplied.
5. Remove twistout(s) from refractor ends(s) by gripping firmly with pliers at one side of the internal piece (to be removed) and carefully twisting to tear around the groove.
6. Continue with step 6 above.



---

**Surface Corder Adapter for Conduit**

1. Read all fixture markings and labels to ensure correct installation of the fixture. Additional information may be located on the fixture, separate from this instruction sheet, regarding orientation and mounting restrictions. When mounting corner adapter to wall, adapter must be oriented in the corner so that the ceiling and wall can be use as mounting surfaces.
2. Disconnect power to the circuit before wiring fixture.
3. Locate and drill 6 pilot holes in mounting surface. Use surface corner adapter as template using holes in adapter. Using 1/4-20 fasteners and anchors appropriate for the mounting surface, (not supplied), mount surface adapter to building.
4. Connect fixture leads to power supply leads using connectors suitable for the gauge and number of wires being used (not included). Connections are to be made in the surface adapter. Black fixture lead connects to the supply conductor, white fixture lead connects to the neutral supply conductor, and the grounding wire must be connected to a suitable ground.
5. Mount wired fixture baseplate to adapter using the six No. 1/4-20 × 1" screws. Install lamp. Mount diffuser/refractor to base using Torx® fasteners (included) and 9500 screwdriver (ordered 1separately).

NOTE: To insure the fixtures watertight integrity, especially if the fixture is mounted in direct exposure to the elements, caulk between the mounting surface and base using a high quality caulking material.

**CUSTOMER SERVICE**

---

For technical assistance, call 1-800-4KENALL (1-800-453-6255). For additional instructions, go to [www.kenall.com/Installs](http://www.kenall.com/Installs)

**WARRANTY**

---

For warranty information visit [www.kenall.com/Resources/Certified-Performance-Warranties](http://www.kenall.com/Resources/Certified-Performance-Warranties)



[www.kenall.com](http://www.kenall.com)

P: 800-4-Kenall

F: 262-891-9701

10200 55th Street Kenosha, Wisconsin 53144

When you see this image, you will know the Kenall product shown or described is designed and manufactured in the USA with components purchased from US suppliers, and meets the Buy American requirements under the ARRA. Kenall has not determined the origin of its domestically purchased components or the subcomponents thereof. May be covered by patents found at [www.kenall.com/patents](http://www.kenall.com/patents). Content of specification sheets is subject to change; please consult [www.kenall.com](http://www.kenall.com) for current product details. © 2015 Kenall Mfg. Co. All rights reserved.