

RHR SERIES



IMPORTANT SAFEGUARDS

When using electrical equipment, basic safety precautions should always be followed, including the following:

THIS PRODUCT MUST BE INSTALLED IN ACCORDANCE WITH THE APPLICABLE INSTALLATION CODE BY A PERSON FAMILIAR WITH THE CONSTRUCTION AND OPERATION OF THE PRODUCT AND THE HAZARDS INVOLVED. DISCONNECT POWER TO ALL CIRCUITS BEFORE WIRING FIXTURE. INSTALL IN ACCORDANCE WITH ALL NATIONAL, STATE, AND LOCAL CODES. DO NOT CONNECT TO AN UNGROUNDED SUPPLY. READ ALL FIXTURE MARKINGS AND LABELS TO ENSURE CORRECT INSTALLATION OF FIXTURE. SUPPLEMENTAL INSTRUCTIONS MAY BE LOCATED ON THE FIXTURE, IN ADDITION TO THIS INSTRUCTION SHEET, REGARDING ORIENTATION, OR MOUNTING RESTRICTIONS.

SAVE THESE INSTRUCTIONS

INSTALLATION INSTRUCTIONS

1. Read all fixture markings and labels to insure correct installation of the fixture. Additional information may be located on the fixture, separate from this instruction sheet, regarding orientation and mounting restrictions.
2. For One-Year Guarantee, fixture must be mounted to surface with at least four fasteners (4-point mounting).
3. Disconnect power to the circuit before wiring fixture.
4. Remove Torx® fastener using 9500 driver (obtained separately). Rotate lens 10 counterclockwise and lift from fixture. If applicable, remove fasteners securing reflector to fixture.
5. Place fixture over an installed electrical junction box. Locate and drill 4 pilot holes in mounting surface. Use fixture baseplate as template. Using 1/4-20 fasteners and anchors appropriate for the mounting surface (not supplied), mount fixture baseplate to surface. For wall mount applications, base must be installed so that Torx® fastener is at "6 o'clock" position (bottom).
6. Connect fixture leads to power supply leads using connectors suitable for the gauge and number of wires being used (not included). Connections are to be made in the junction box, not the fixture. Black fixture lead connects to the supply conductor, white fixture lead connects to the neutral supply conductor, and the grounding wire must be connected to a suitable ground.
7. As applicable, reassemble ballast housing, reflectors, wireway covers, etc. to the baseplate. Install lamp. Replace lens and secure with Torx® fastener.
8. Wet Location Fixtures: Check gasket for proper seal between fixture and mounting surface. Make sure gasket is in place, free of tears, and maintaining original form. For rough or irregular surfaces, caulking may be necessary.



CUSTOMER SERVICE

For technical assistance, call 1-800-4KENALL (1-800-453-6255).

WARRANTY

All standard fixtures manufactured by Kenall are warranted to be free of defects in workmanship and materials for a period of one year from the date of invoice. A toll-free hot-line number, 1-800-331-1416 is provided for immediate resolution of any field problems encountered in connection with the use of Kenall's exclusive high abuse lighting products.

Kenall reserves the right to issue credit, repair, or replace the defective merchandise, at its discretion, upon notification and confirmation by its local representative of the defect. Kenall also reserves the right to test and examine the defective product if the defect is questionable and to deny the warranty herein for any product altered, improperly installed, installed in applications for which it is not intended. This includes operation in ambient temperatures above stated limits for any length of time. Failure by electrical surge shall not be covered under warranty.

Kenall assumes no responsibility for labor or freight costs incurred in connection with the installation, removal, or replacement of products determined to be defective or any other consequential or incidental damages arising from the use of the product. Kenall's entire liability on any claim of loss or damage resulting from a defective product is limited to the replacement price of the product.

The foregoing warranty is exclusive of all other warranties and no other warranties of any kind are expressed or implied.

