

## WSP/WPP SERIES

**IMPORTANT SAFEGUARDS**

When using electrical equipment, basic safety precautions should always be followed, including the following:

THIS PRODUCT MUST BE INSTALLED IN ACCORDANCE WITH THE APPLICABLE INSTALLATION CODE BY A PERSON FAMILIAR WITH THE CONSTRUCTION AND OPERATION OF THE PRODUCT AND THE HAZARDS INVOLVED. DISCONNECT POWER TO ALL CIRCUITS BEFORE WIRING FIXTURE. INSTALL IN ACCORDANCE WITH ALL NATIONAL, STATE, AND LOCAL CODES. DO NOT CONNECT TO AN UNGROUNDED SUPPLY. READ ALL FIXTURE MARKINGS AND LABELS TO ENSURE CORRECT INSTALLATION OF FIXTURE. SUPPLEMENTAL INSTRUCTIONS MAY BE LOCATED ON THE FIXTURE, IN ADDITION TO THIS INSTRUCTION SHEET, REGARDING ORIENTATION, OR MOUNTING RESTRICTIONS.

**SAVE THESE INSTRUCTIONS****INSTALLATION INSTRUCTIONS****WSP (Wall Surface Mount Plate) models:**

1. Select and install junction-box sized (single, double, or triple-gang) for wall plate(s) to be installed.

**For devices with mounting tabs:**

2. Place backplate over junction-box and attach device(s) and backplate to junction-box using screws provided with device.
3. Make all connections required for type of device(s).
4. Attach wall plate to backplate using supplied 10-32 screws and washers.



**For devices without mounting tabs:**

2. Install backplate over junction-box and attach to junction-box using screws appropriate for junction box (supplied by others).
3. Make all connections required for type of device(s).
4. Install device(s) to wall plate if required.
5. Attach wall plate to backplate using supplied 10-32 screws and washers.


**WPP (Wall Pour-in-place Plate) models:**

1. Select and install junction-box sized (single, double, or triple-gang) for wall plate(s) to be installed.
2. Install backplate to junction-box using screws appropriate for junction box (supplied by others). Maximum depth of mud-in/concrete flanges is 3.25" from front face of backplate.
3. As required for application, run appropriate conduit (supplied by others) to junction-box and complete concrete installation.
4. Install devices – removal and reinstallation of backplate screws may be required for device(s) with mounting tabs.
5. Make all connections required for type of device(s).
6. If required, install device(s) to wall plate.
7. Attach wall plate to backplate using supplied 10-32 screws and washers.




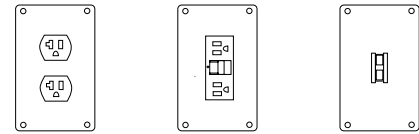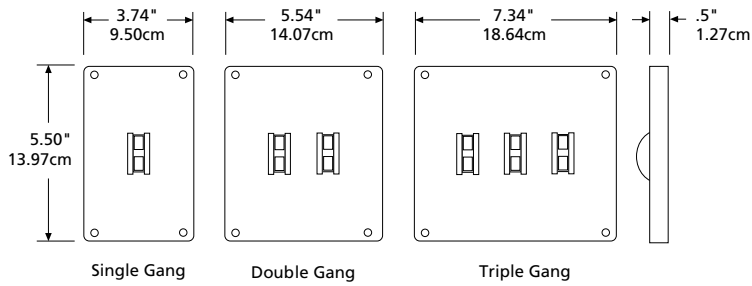


Duplex Receptacle GFI Duplex Receptacle Switch

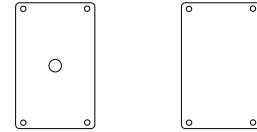

TV/Telephone Outlet Blank

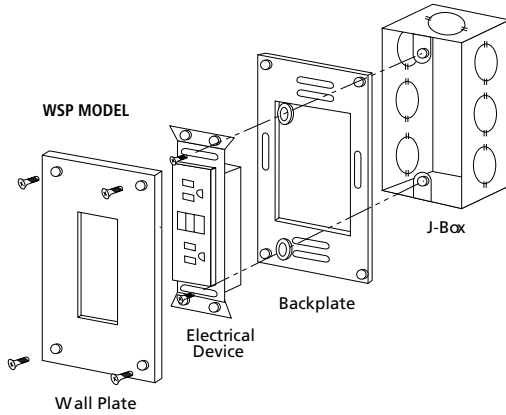

For Steel or Block Wall Construction

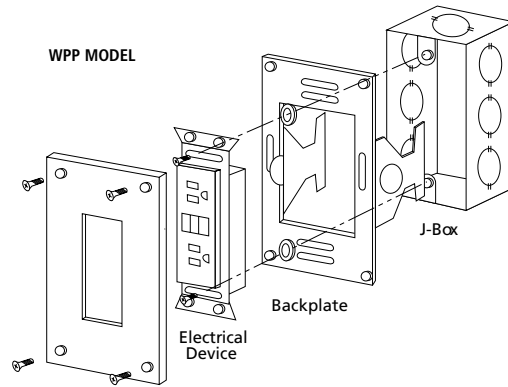

For Poured Concrete Wall Construction

## CUSTOMER SERVICE

For technical assistance, call 1-800-4KENALL (1-800-453-6255).

## WARRANTY

For warranty information visit [www.kenall.com/Resources/Certified-Performance-Warranties](http://www.kenall.com/Resources/Certified-Performance-Warranties)



www.kenall.com | P: 800-4-Kenall | F: 262-891-9701 | 10200 55th Street Kenosha, Wisconsin 53144, USA

A brand of **legrand**

This product complies with the Buy American Act: manufactured in the United States with more than 50% of the component cost of US origin. It may be covered by patents found at [www.kenall.com/patents](http://www.kenall.com/patents). Content of specification sheets is subject to change; please consult [www.kenall.com](http://www.kenall.com) for current product details. ©2019 Kenall Mfg. Co.