

CSSGI SERIES

IMPORTANT SAFEGUARDS


When using electrical equipment, basic safety precautions should always be followed, including the following:

THIS PRODUCT MUST BE INSTALLED IN ACCORDANCE WITH THE APPLICABLE INSTALLATION CODE BY A PERSON FAMILIAR WITH THE CONSTRUCTION AND OPERATION OF THE PRODUCT AND THE HAZARDS INVOLVED. DISCONNECT POWER TO ALL CIRCUITS BEFORE WIRING FIXTURE. INSTALL IN ACCORDANCE WITH ALL NATIONAL, STATE, AND LOCAL CODES. DO NOT CONNECT TO AN UNGROUNDED SUPPLY. READ ALL FIXTURE MARKINGS AND LABELS TO ENSURE CORRECT INSTALLATION OF FIXTURE. SUPPLEMENTAL INSTRUCTIONS MAY BE LOCATED ON THE FIXTURE, IN ADDITION TO THIS INSTRUCTION SHEET, REGARDING ORIENTATION, OR MOUNTING RESTRICTIONS.

SAVE THESE INSTRUCTIONS

RECESSED GRID FIXTURES

1. Fixture is designed for use with 9/16" and 15/16" lay-in grid ceiling systems with vertical grid T thickness' of less than 1/4" and a maximum height of 2". Grid systems can be installed with standard 24 or 48 inch center line spacing of grid.
2. Fixture housing lays into grid system. Raise fixture into opening (this step may require two people for safety).

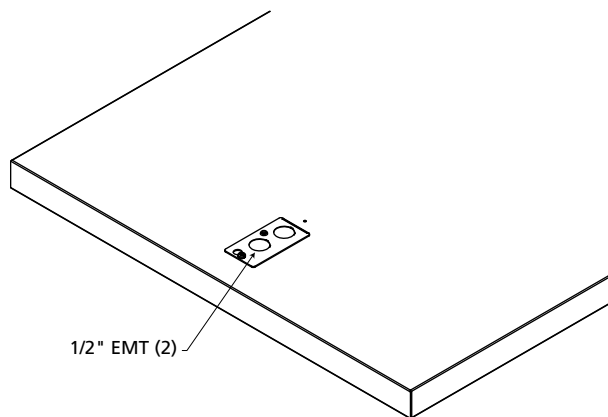

3. Remove access plate via fastener. Secure conduit to plate at 1/2" KOs. Make wiring connections to building power/control lines. Install access plate and fastener.





FLANGE ADAPTER KIT (FA) ACCESSORY

NOTE: Recommended ceiling cutout for flange adapter kit:

- 2'x2' - 24.75" x 24.75"
- 2'x4' - 24.75" x 48.75"

1. Place the frame into your opening and secure with screws or nails to your frame support structure.
2. Once drywall frame is installed, remove wiring access plate by removing fastener on fixture. Secure conduit to plate at 1/2" KOs. Make wiring connections to building power/control lines. Install access plate and fastener.
3. Fixture housing lays into frame support.

CUSTOMER SERVICE

For technical assistance, call 1-800-4KENALL (1-800-453-6255).

WARRANTY

For warranty information visit www.kenall.com/Resources/Certified-Performance-Warranties

