

ASC Spartanburg is First Surgery Center in South Carolina to Install Bacteria-Killing Operating Room Lights



Project: Ambulatory Surgery Center of Spartanburg
Location: Spartanburg, South Carolina

“We wanted a disinfectant technology that would be effective, efficient and easy to use which is exactly what Indigo-Clean is. Compared to other disinfecting technology on the market, Indigo-Clean was the most cost effective and efficient since there was no room downtime, and because it’s automatic, it alleviates the concern of training and human error.”

– Mike Pankey, Administrator, ASC Spartanburg

Project Summary

The Ambulatory Surgery Center (ASC) of Spartanburg is the first free-standing surgery center in South Carolina to use Indigo-Clean™ continuous environmental disinfection technology within their operating room light fixtures to help reduce the risk of surgical site infections.


Challenge: Maintaining a safe and clean environment for patients in a room that is used continuously throughout the day for back-to-back surgical procedures.

Solution: Indigo-Clean Continuous Environmental Disinfecting Lights

Indigo-Clean Benefits

- Indigo-Clean is clinically proven to reduce harmful bacteria in the operating room, including MRSA and *C. diff*, 70% or more, beyond routine cleaning
- Unlike UV devices, Indigo-Clean is safe for room occupants, including patients and healthcare providers
- Indigo-Clean’s automated operation minimizes human error and operating room downtime
- The fixture is switchable between White and Indigo Disinfection Modes

Use of Indigo-Clean Continuous Disinfection Technology Translates into More Procedures, Added Revenue for ASC Spartanburg

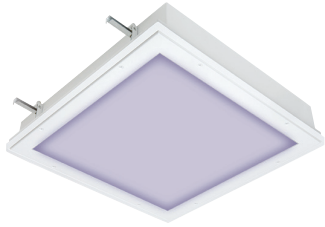

ASC Spartanburg is a multi-specialty surgical center with seven operating rooms and two endoscopy suites. The center opened in April 2002 and is a joint venture with Spartanburg Regional Hospital. By 2009, the center handled over 11,000 procedures per year.

ASC's Administrator, Mike Pankey, is charged with balancing a very busy OR schedule with patient safety: "Maintaining a safe and clean environment for our patients is our top priority," he said. "We wanted a disinfectant technology that would be effective, efficient and easy to use, which is exactly what Indigo-Clean is. Compared to other disinfecting technology on the market, Indigo-Clean was the most cost effective and efficient, since there was no room downtime." He continued: "And because it's automatic, it alleviates concern of training and human error."

Mr. Pankey noted that during the course of a day, other disinfecting technology would leave the OR room down up to two hours — for a busy OR, that's a lot of time and revenue lost. "We can't afford to have a room down especially in our busiest operating rooms," he said. "Indigo-Clean safely and continuously cleans the environment during and after surgical procedures, which makes it a great addition to our current cleaning protocol."

"We conducted ATP testing on a variety of surfaces for a period of 30 days using a commercially available system to independently verify Indigo-Clean's efficacy," Pankey stated. "Our results show a reduction consistent with their disinfection claim, and we're excited to provide a cleaner, safer environment for our patients."

Indigo-Clean fixtures use light-emitting diodes (LEDs) to generate visible white light that also contains a narrow spectrum of indigo colored light. This indigo color uses a wavelength of 405 nanometers (nm) to automatically, safely and continuously disinfect the air, and hard and soft surfaces. The 405nm light is absorbed by molecules within the bacteria, producing a chemical reaction that kills the bacteria from the inside-as if common household bleach had been used. When the OR is not in use, the lights can be switched to an Indigo-only mode, providing a higher degree of safe disinfection.


Indigo-Clean bolsters current cleaning protocols to reduce the harmful bacteria that causes hospital-acquired infections (HAIs), but unlike UV light, it is safe for room occupants. Recent hospital research studies have proven significant antimicrobial kill rates of more than 70 percent using Indigo-Clean, including proven efficacy in killing MRSA* and *C-diff***.

According to the Centers for Disease Control (CDC), surgical site infections are the most common and costly of all hospital-acquired infections, accounting for 31 percent of all HAIs. Healthcare facilities around the United States are now employing Indigo-Clean Continuous Disinfection Technology as part of a comprehensive HAI reduction program. For other Indigo-Clean success stories, visit indigo-clean.com.

*Maclean M., S.J. MacGregor, J.G. Anderson, G.A. Woolsey, J.E. Coia, K. Hamilton, I. Taggart, S.B. Watson, B. Thakker & G. Gettinby (2010). Environmental Decontamination of a Hospital Isolation Room using High-Intensity Narrow-Spectrum Light. *Journal of Hospital Infection*, 76(3); 247-251. DOI: 10.1016/j.jhin.2010.07.010

**Antimicrobial Activity of a Continuous Visible Light Disinfection System by Rutala, et. al, ID Week 2016.

"Maintaining a safe and clean environment for our patients is our top priority"

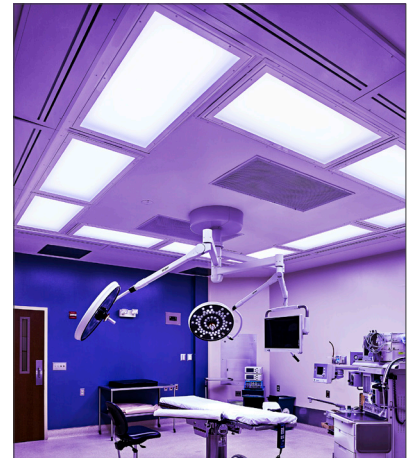

Indigo-Clean Features:

- Available sizes 1'x4', 2'x2' and 2'x4'
- One-piece, sealed housing; smooth exterior doorframe and lens for infection control and simplified cleaning protocols
- Diffused high-efficiency lens for reduced glare
- Contributes to the ambient light levels in the room

Benefits for the Ambulatory Surgery Center of Spartanburg:

- Continuous environmental disinfection kills bacteria missed during routine cleaning
- Unlike UV devices, Indigo-Clean does not require a technician or long periods of downtime
- Requires no special staff or training to use
- Does not require consumables

For more information, please visit us on the web at www.kenall.com



www.kenall.com

P: 800-4-Kenall

F: 262-891-9701

10200 55th Street Kenosha, Wisconsin 53144

When you see this image, you will know the Kenall product shown or described is designed and manufactured in the USA with components purchased from US suppliers, and meets the Buy American requirements under the ARRA. Kenall has not determined the origin of its domestically purchased components or the subcomponents thereof. May be covered by patents found at www.kenall.com/patents. Content of specification sheets is subject to change; please consult www.kenall.com for current product details. © 2016 Kenall Mfg. Co. All rights reserved.